 
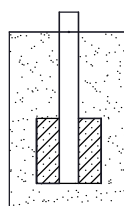 
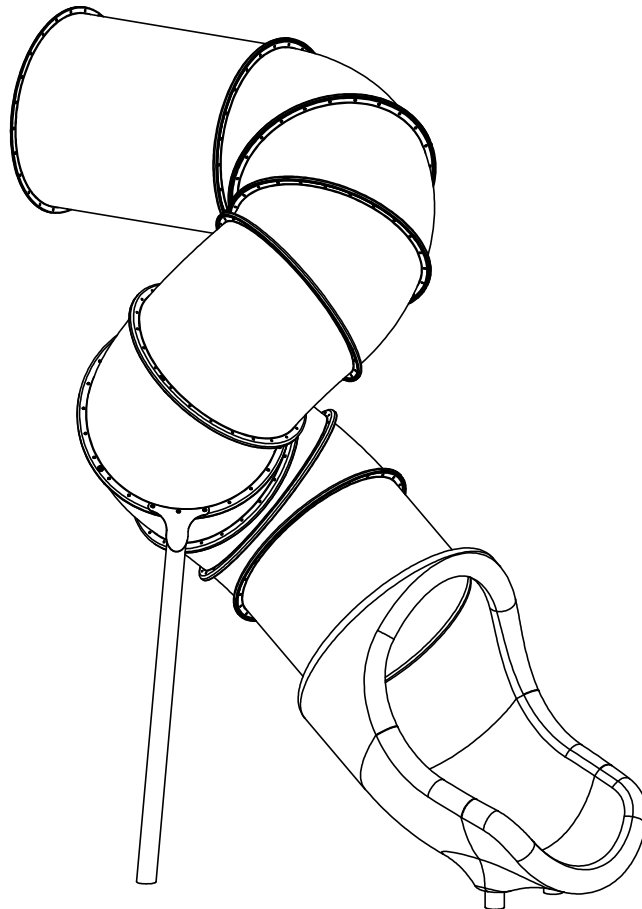 
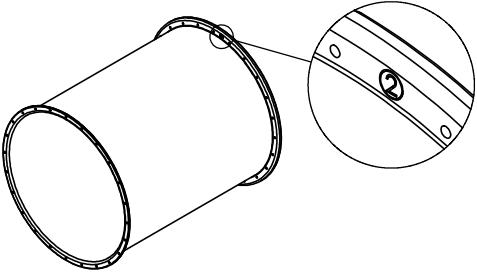 
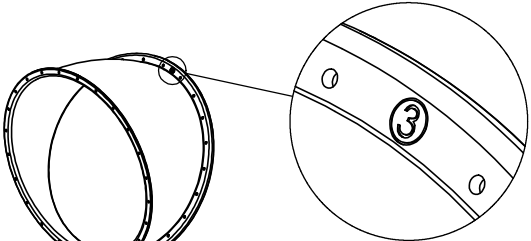 
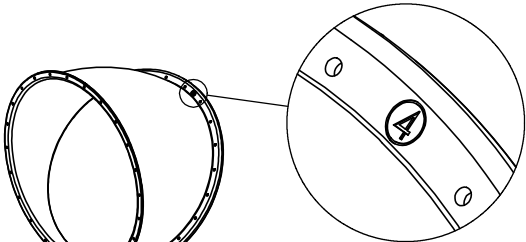 
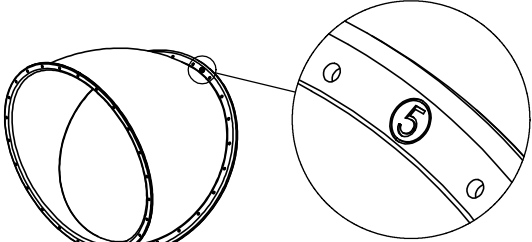 
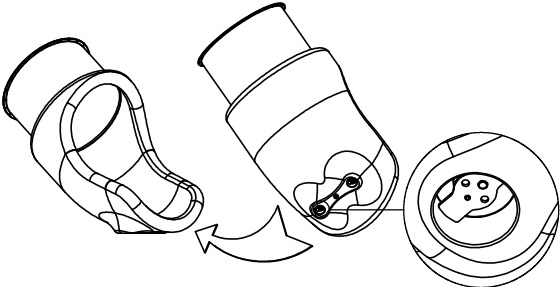 
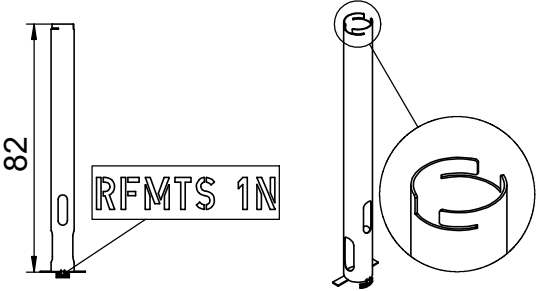 
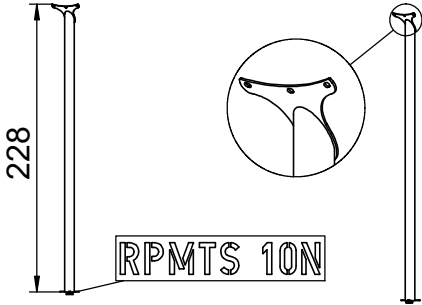 


 
MTSS_H240_25435553316_B N (LZ)

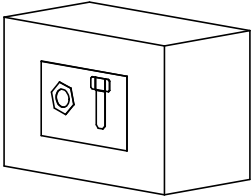


 

 



 

MTSS_H240_25435553316_B N

 
NR	ELEMENT	MTSS_H240_25435553316_B N (LZ)
1		
2		1
3		3
4		1
5		4
6		1

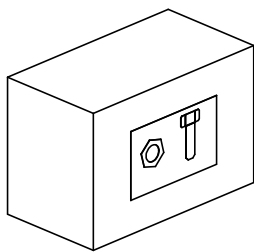NR	ELEMENT	MTSS_H240_25435553316_B N (LZ)
7		2
8		1
9		1



MTSS_H240_25435553316_B N

Nr	Element			Σ
10		DIN 9021	6x18	432
15		ISO 7380	M6x30	216
16		-	K1_d21_B	216
17		-	Z1_d21_B	216
18		DIN 985	M6 (OC)	216
21		DIN 125	8x16	6
43		DIN 1587	M8	3
45		ISO 7380	M8x30	3
58		-	LOCTITE	1

 
 
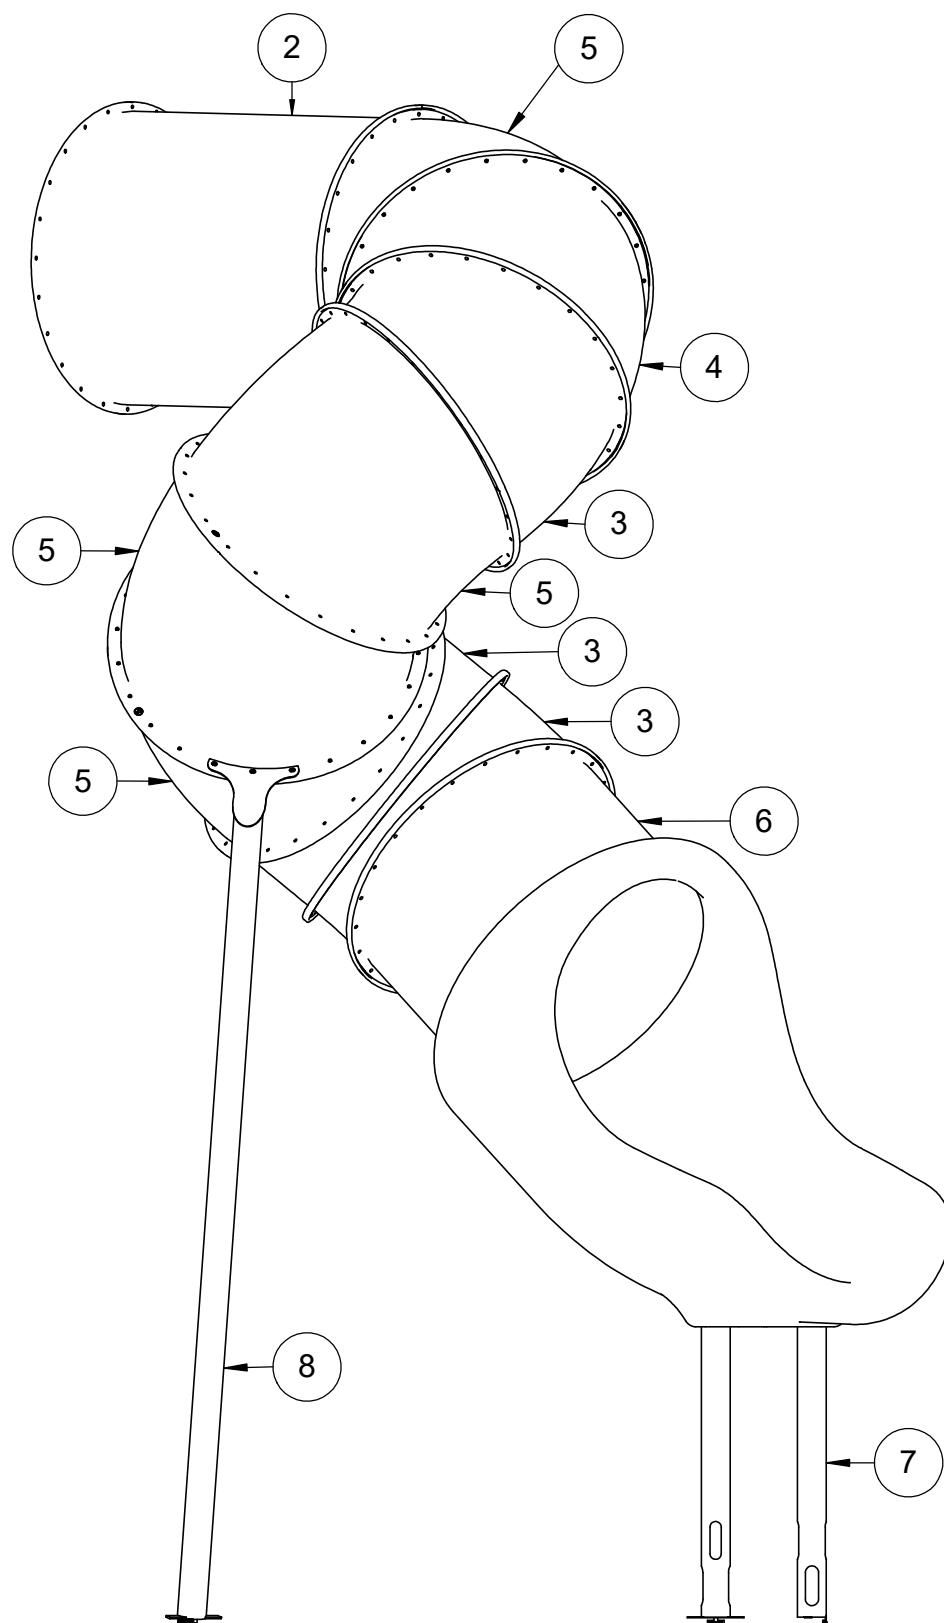 


1

MTSS_H240_25435553316_B N (LZ)



INST_MTS_1
INST_MTS_2
INST_MTS_3
INST_MTS_4

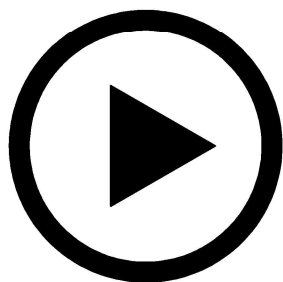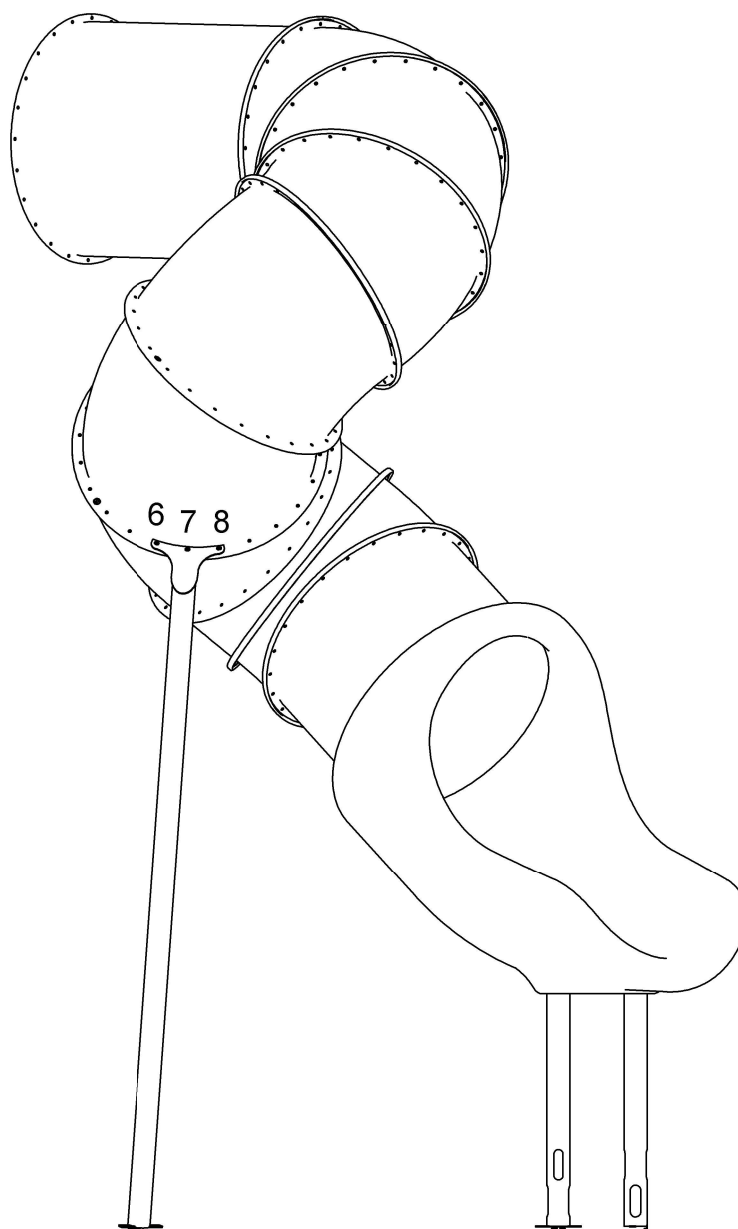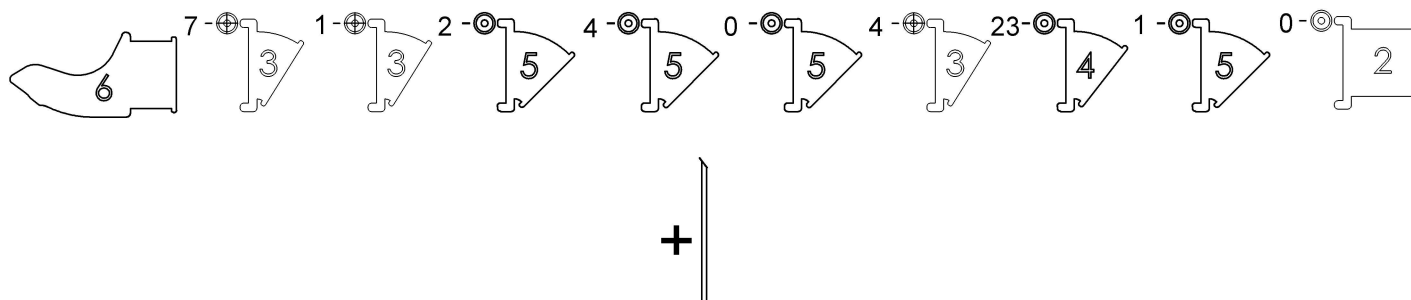

buglo.pl/mts-manual

MANUAL